

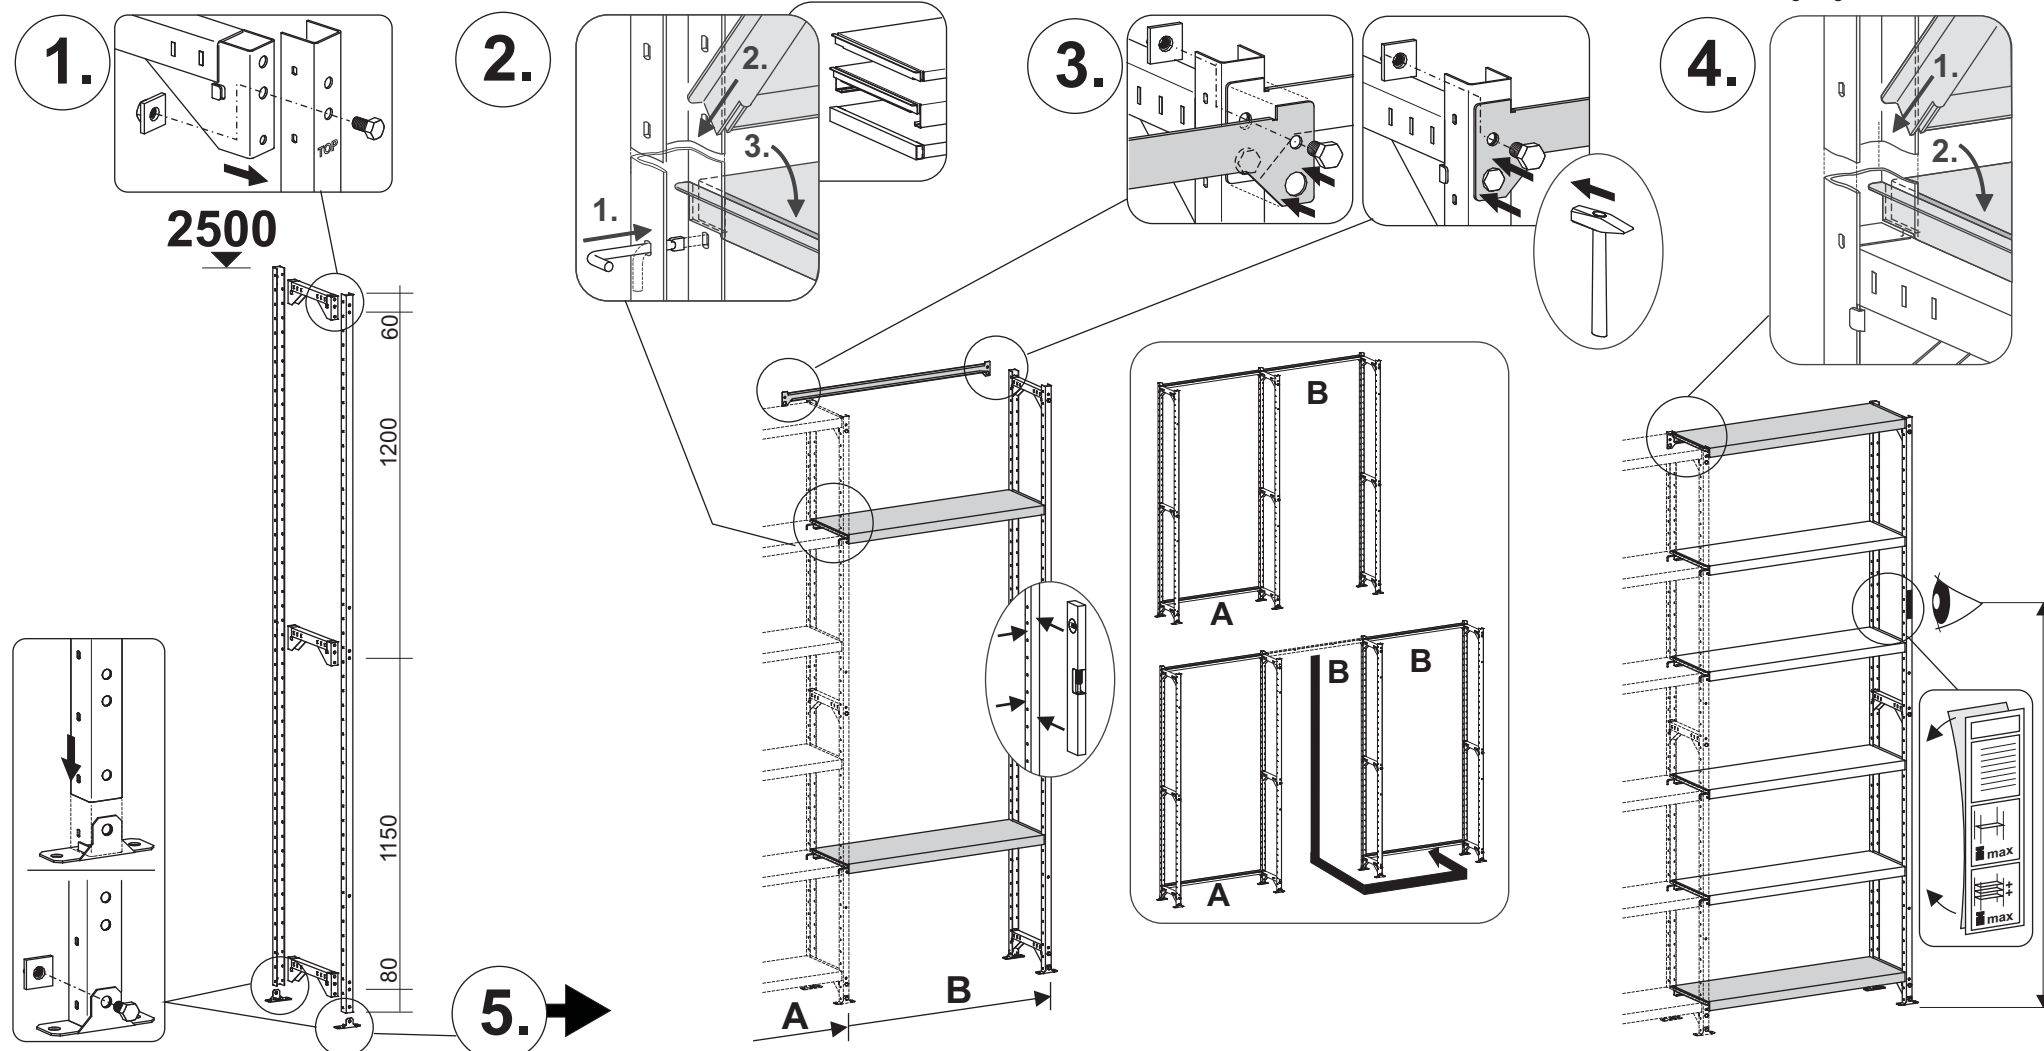
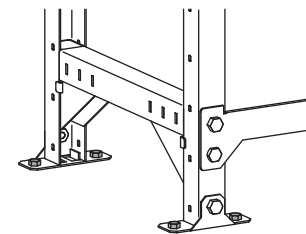
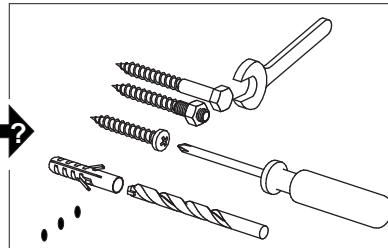
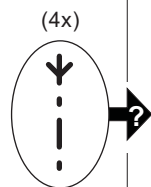
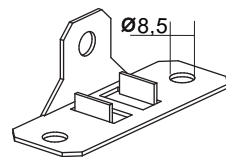




Budget light Verbinder Anbau 2500

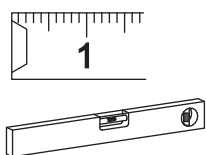




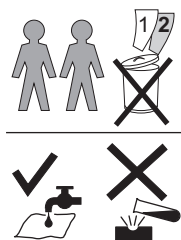


Budget light Verbinder Anbau 2500

5.

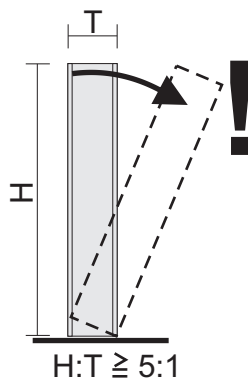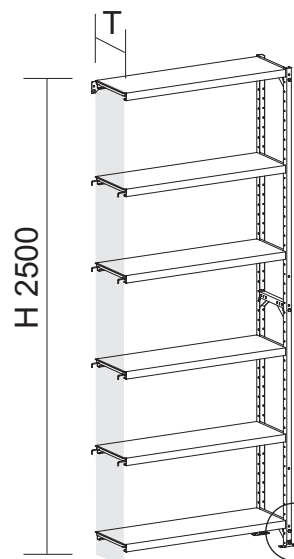

T = 300
400
500

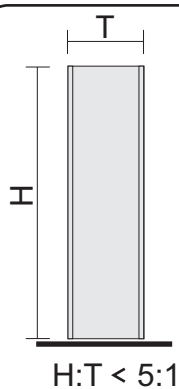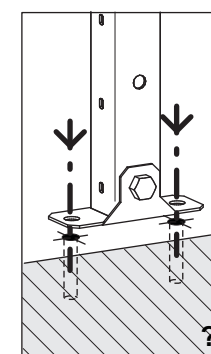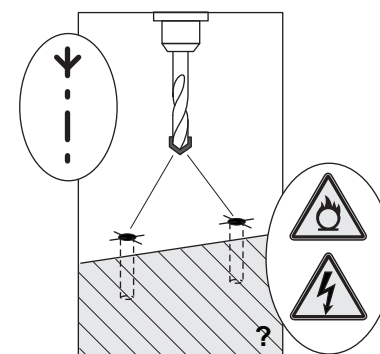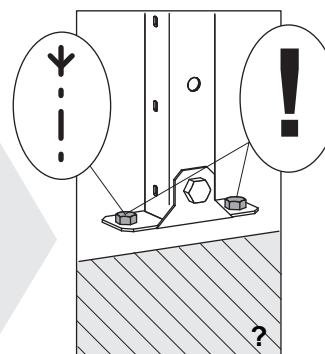

T = 600

